



w w w . p r o - v e n t . c o m

15610 S. Keeler St.
Olathe, Kansas 66062
T: 913.782.8862
T: 1.866.782.8862

U.S. Patent # 7,694,447
and 7,744,170

INSTALLATION GUIDE

Required Materials:

- Hammer
- T-Post
- 7/16" Nutdriver



1

STEP 1


Pound T-Post into the ground with a hammer. The Code Box only fits on the post in one direction. Test the orientation before you set the post in the ground.



2

STEP 2

The back side will be the side of the T-Post that has notches. Slide the mounting brackets over the T-Post, and set the Code Box at your desired height.

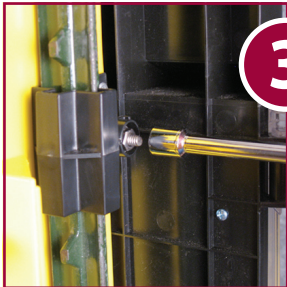

3

STEP 3


Use a 7/16" nutdriver to tighten the brackets onto the T-Post.



4

STEP 4

Place the address numbers (included) onto the address panel.

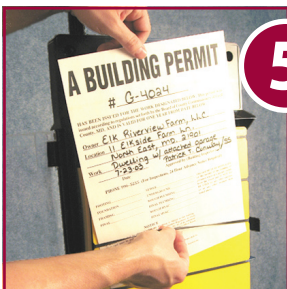

5

STEP 5

Insert the building permit into the permit sleeve.